



C911/C931/C941 - Power Switch Locations

Doc #: 4264

Category: General

Last Updated: 05/12/2015


Statement:

On the new C900 series printers, there are two power switches, one on the front for a "soft" power down, and a "hard" power down from the back side power switch.

- Please note that the "hard" power switch needs to be physically turned on to use the printer.
- Once the unit is operating, use the front "soft" switch to switch the unit off and on. Hold for 1-2 seconds to power down using the soft switch.
- Normally, if only in power save mode, the printer becomes active by pressing the power save button on the front panel.



Soft power switch on front of unit in above picture.

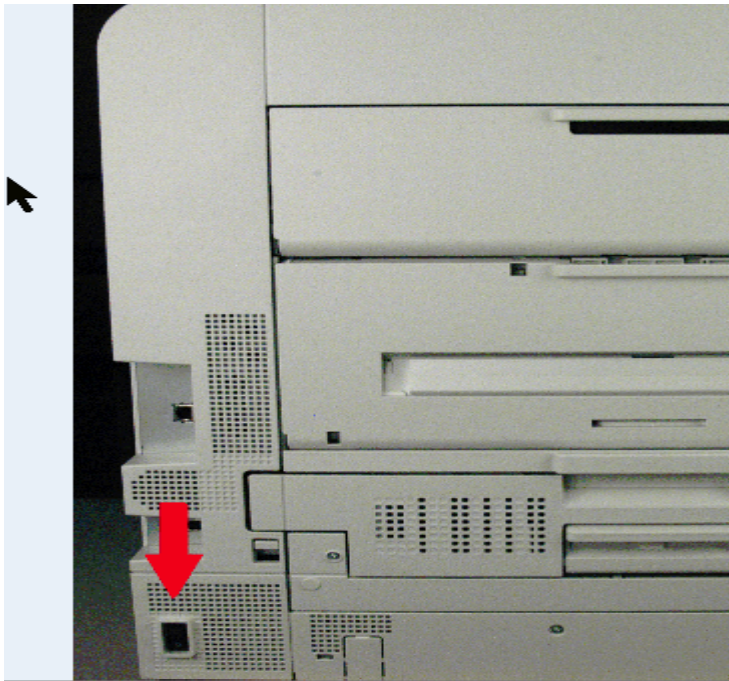

Hard power switch in back of unit in above picture.

Additional Info:

EU General

Product(s): C911dn; C931dn; C931DP; C931e; C941dn; C941DP; C941e

Oki Data has taken care to insure that the information is complete, accurate and up-to-date. However, Oki Data assumes no responsibility for errors or omissions which may occur. All the information provided is subject to change from time to time at the sole discretion of Oki Data.

Copyright © 2004, Oki Data, Americas, Inc.